



# EZ-Rack Serial ATA Mobile Rack

## Quick Installation Guide

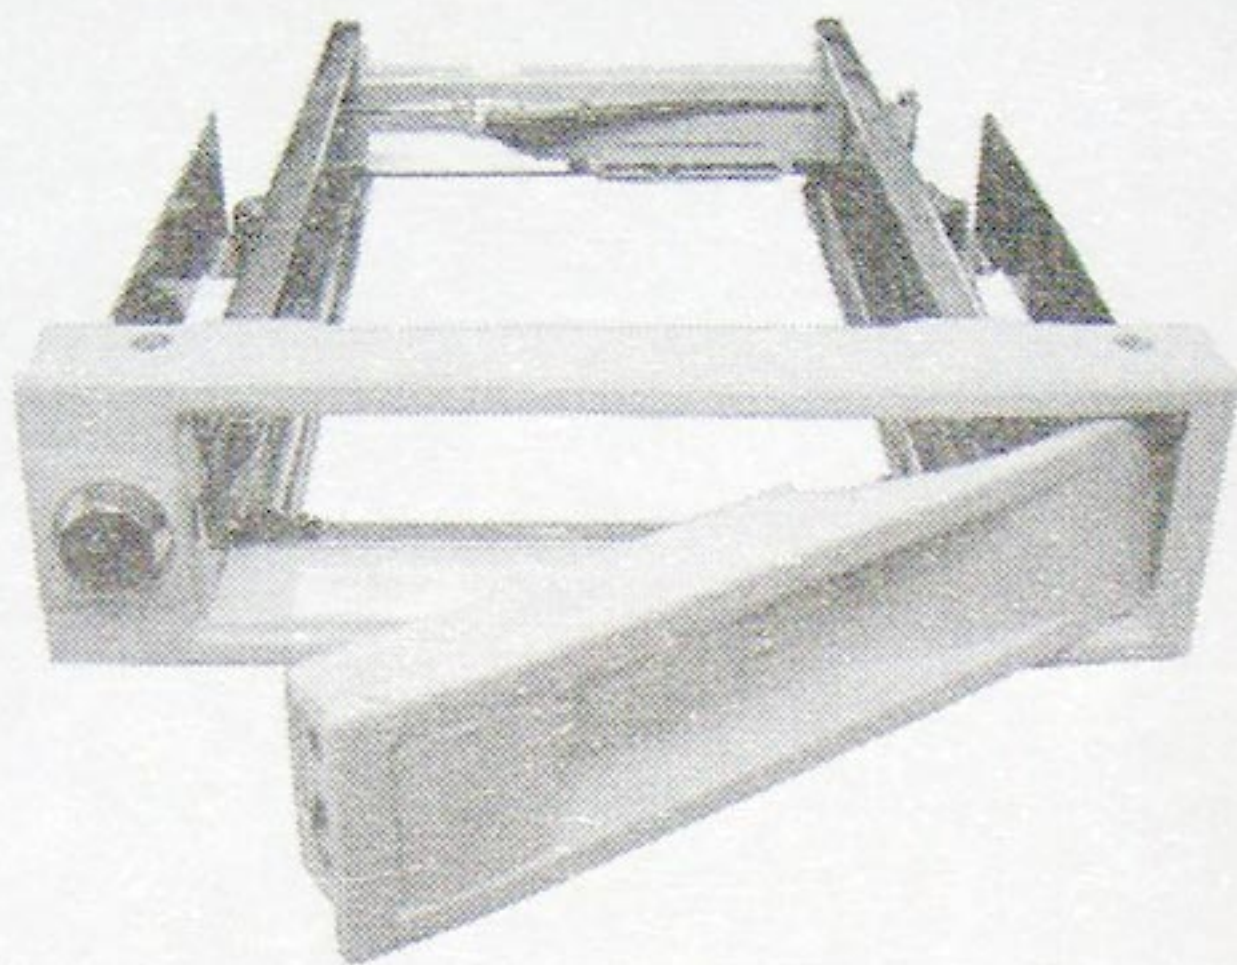


### Content Description

Check this package is completed with these contents;  
one EZ-Rack ,4 screws and 2 keys.

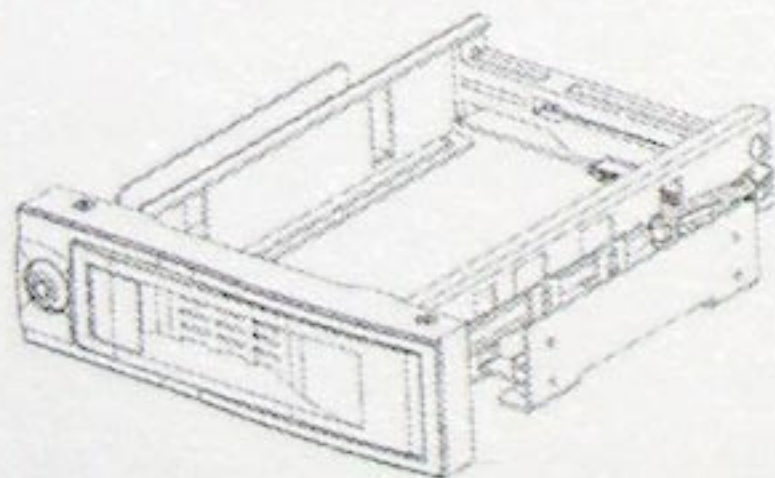


EZ-Rack

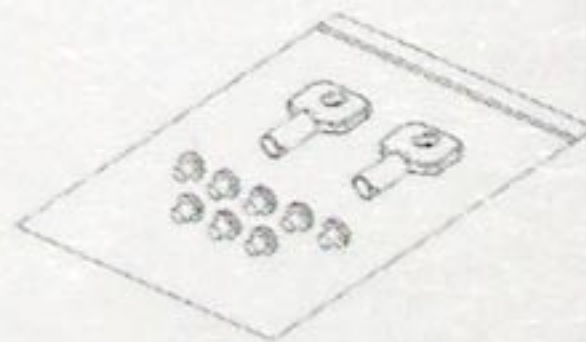


Mounting screw x4 pcs  
Miniature keys x 2 pcs

## Front panel

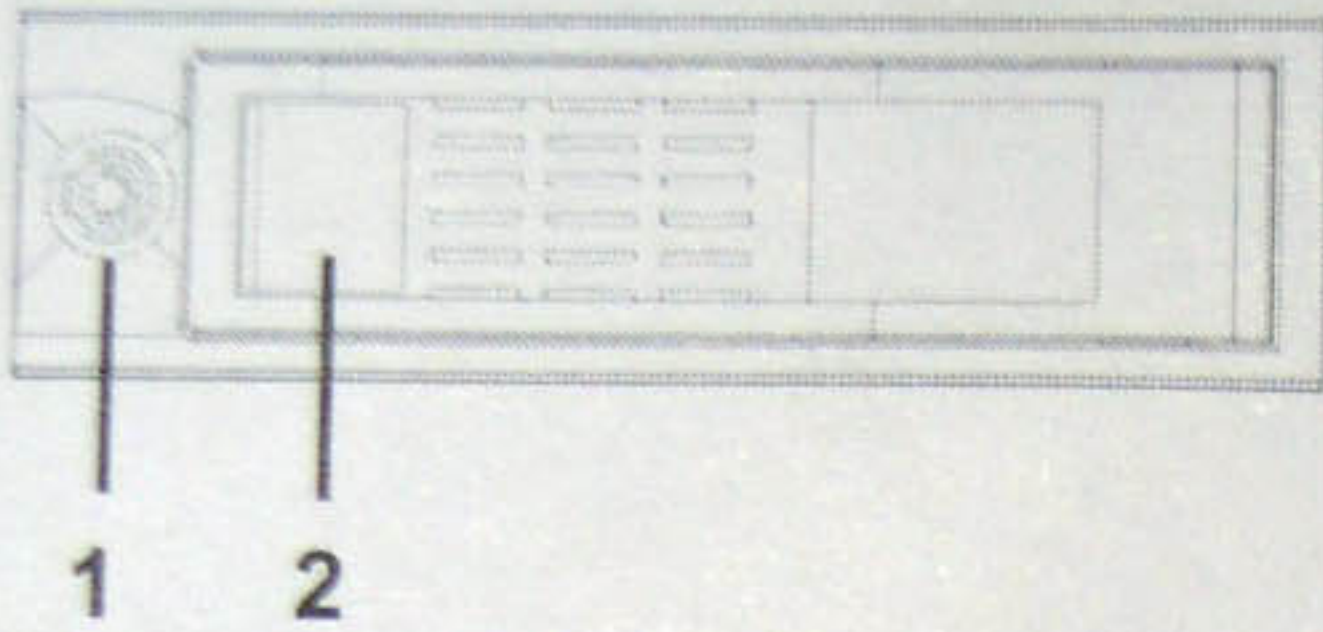


- 1. key lock
- 2. Spring lock

## Rear panel

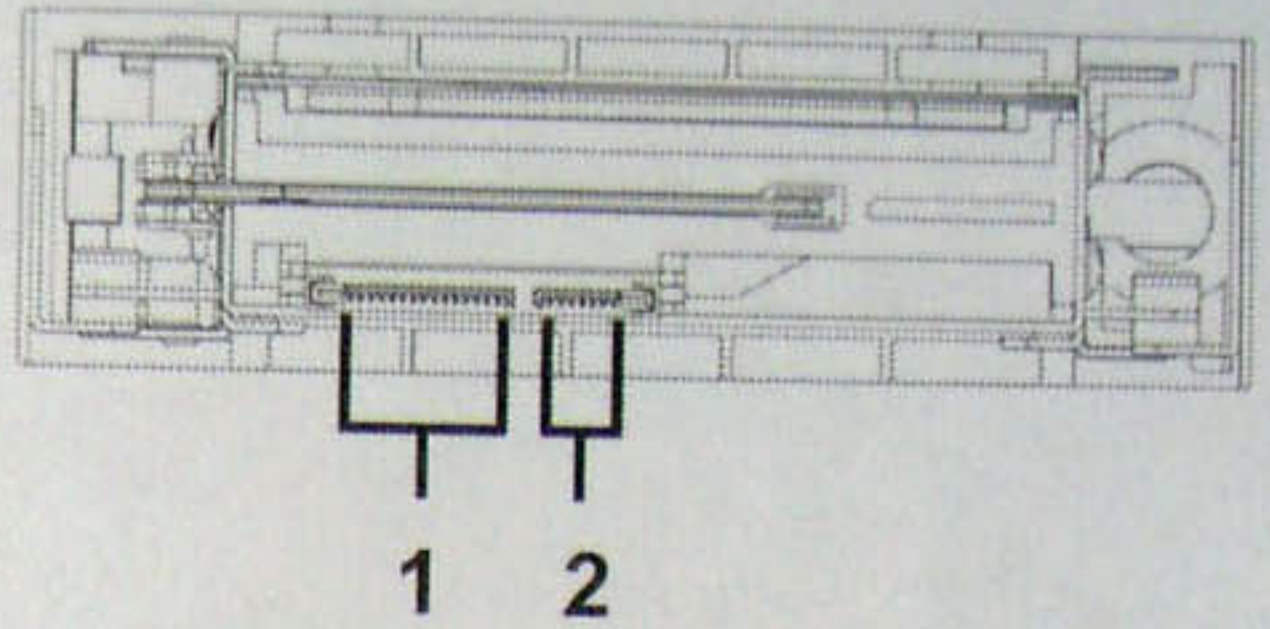


- 1. S-ATA power connector(15pin)
- 2. S-ATA data connector(7pin)



## Key lock

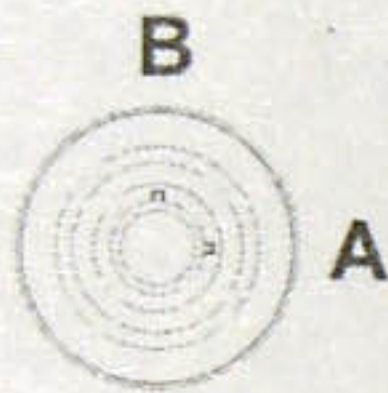

- A: Non-removable
- B: Removable

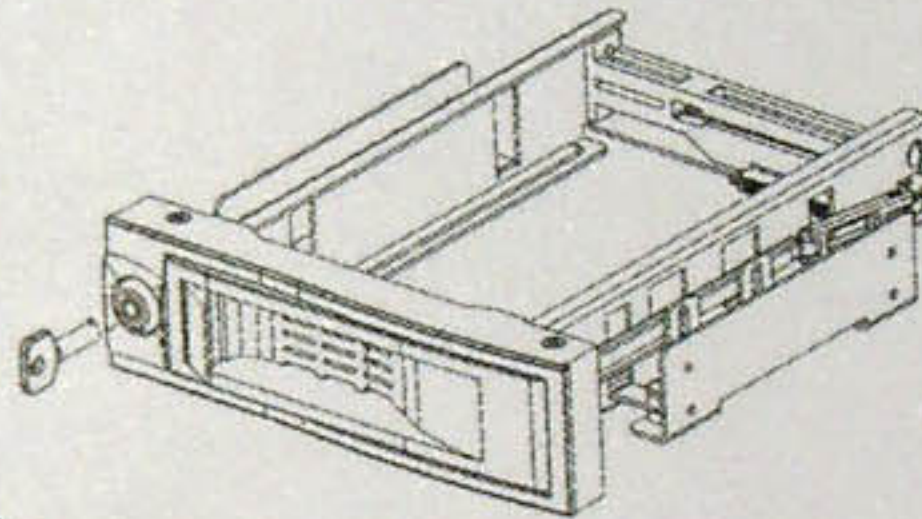



## Spring lock

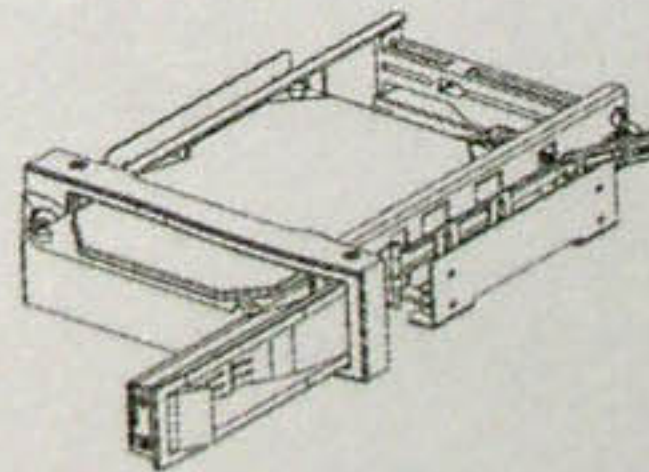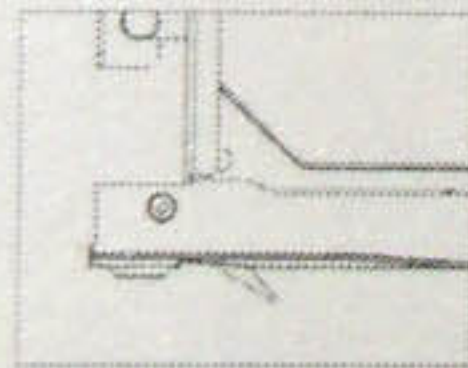


Pull the hard drive spring lock to unload hard drive

## Installing EZ-Rack

- 1. Remove the cover of an empty drive bay.

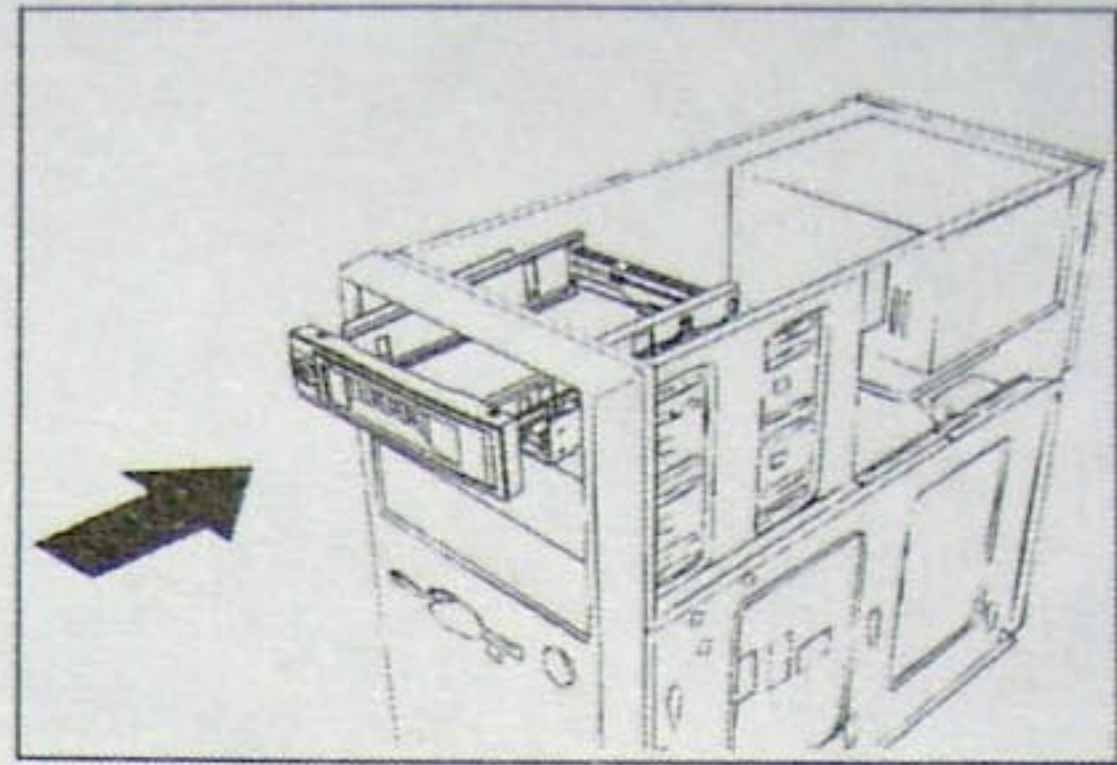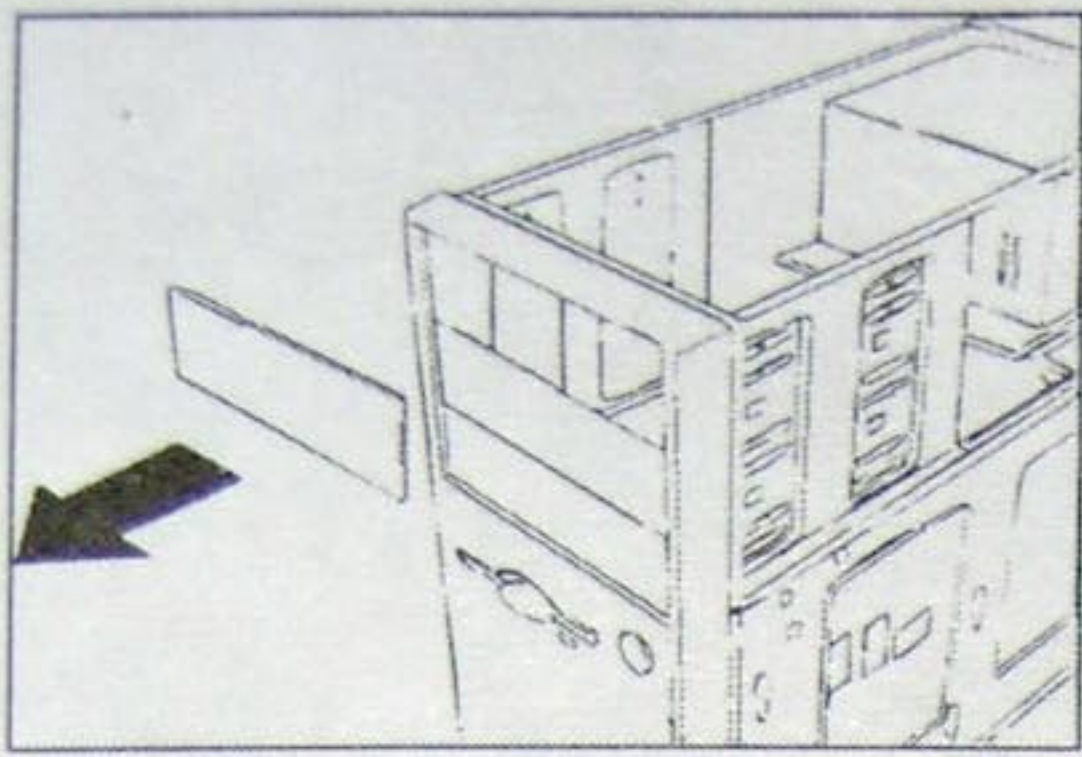


2. Smoothly insert EZ-Rack into the bay and push it inward until the EZ-Rack screw hole is aligned with the hole of the bay.
3. Secure EZ-Rack with screws. Use two screws on each side will be good for EZ-Rack safety function.

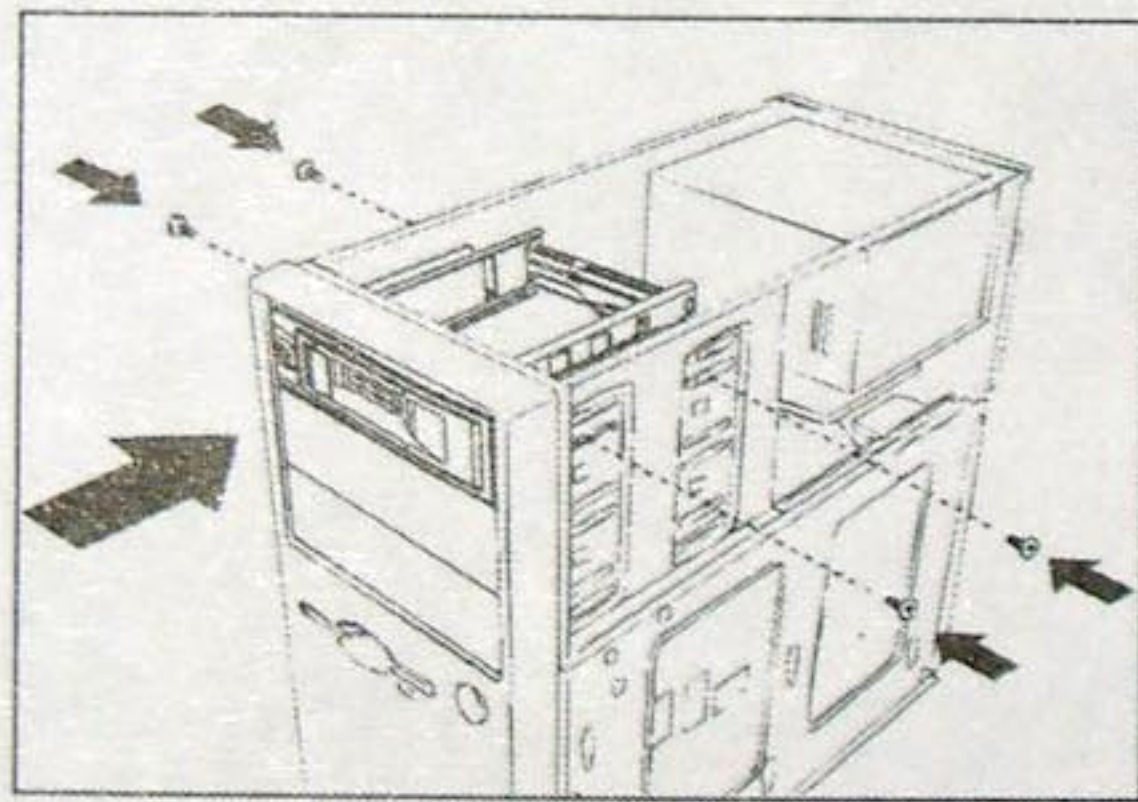

## Connecting the EZ-Rack cable


1. Connect the S-ATA power cable by plugging to the S-ATA power connector on the rear panel.
2. Connect the S-ATA data cable by plugging to the S-ATA data connector on the rear panel.

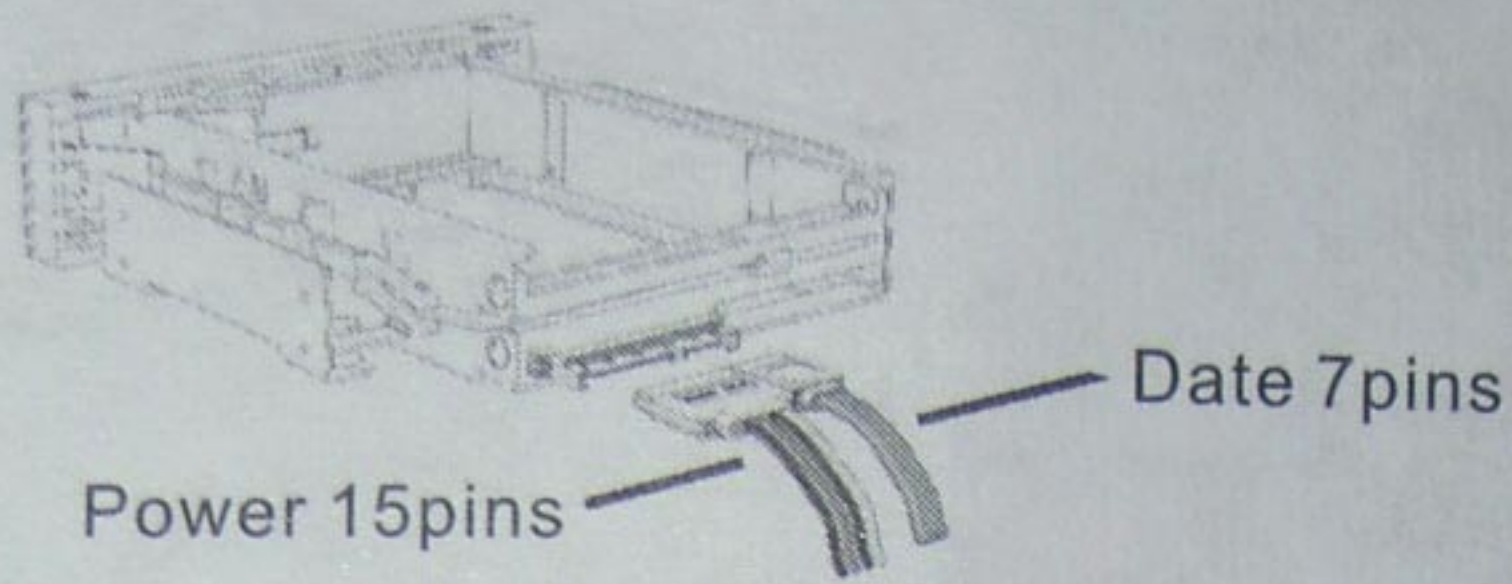


## **EZ-Rack basics**

### **Inserting Hard Drive into EZ-Rack**

1. Pull the spring lock to open the front door.

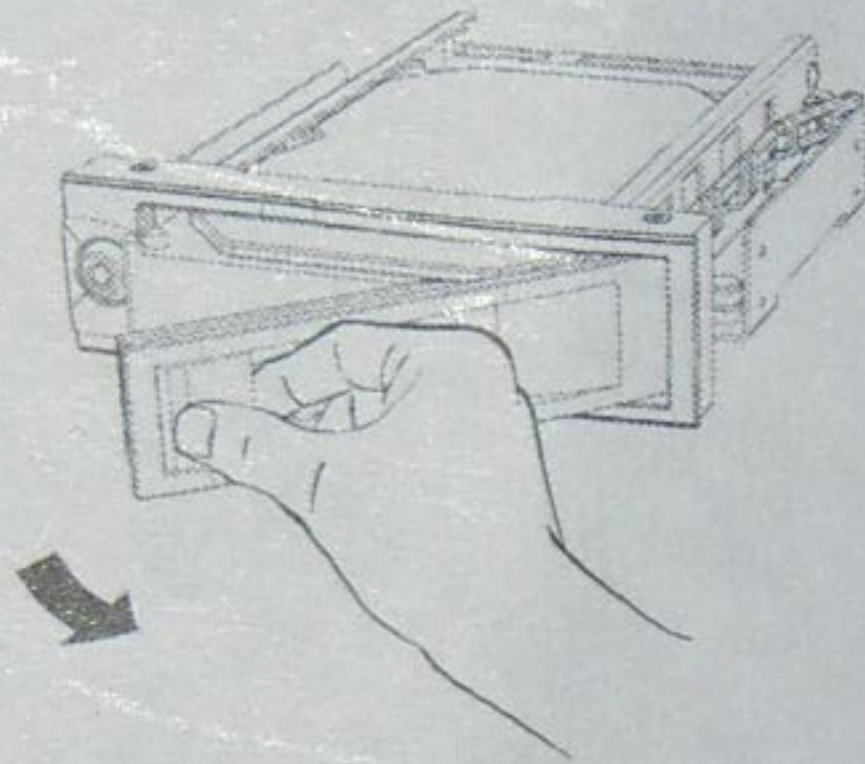

2. Place the hard drive into EZ-Rack with the hard drive label (printed) side up and be sure the hard disk connectors side is inserted into EZ-Rack.

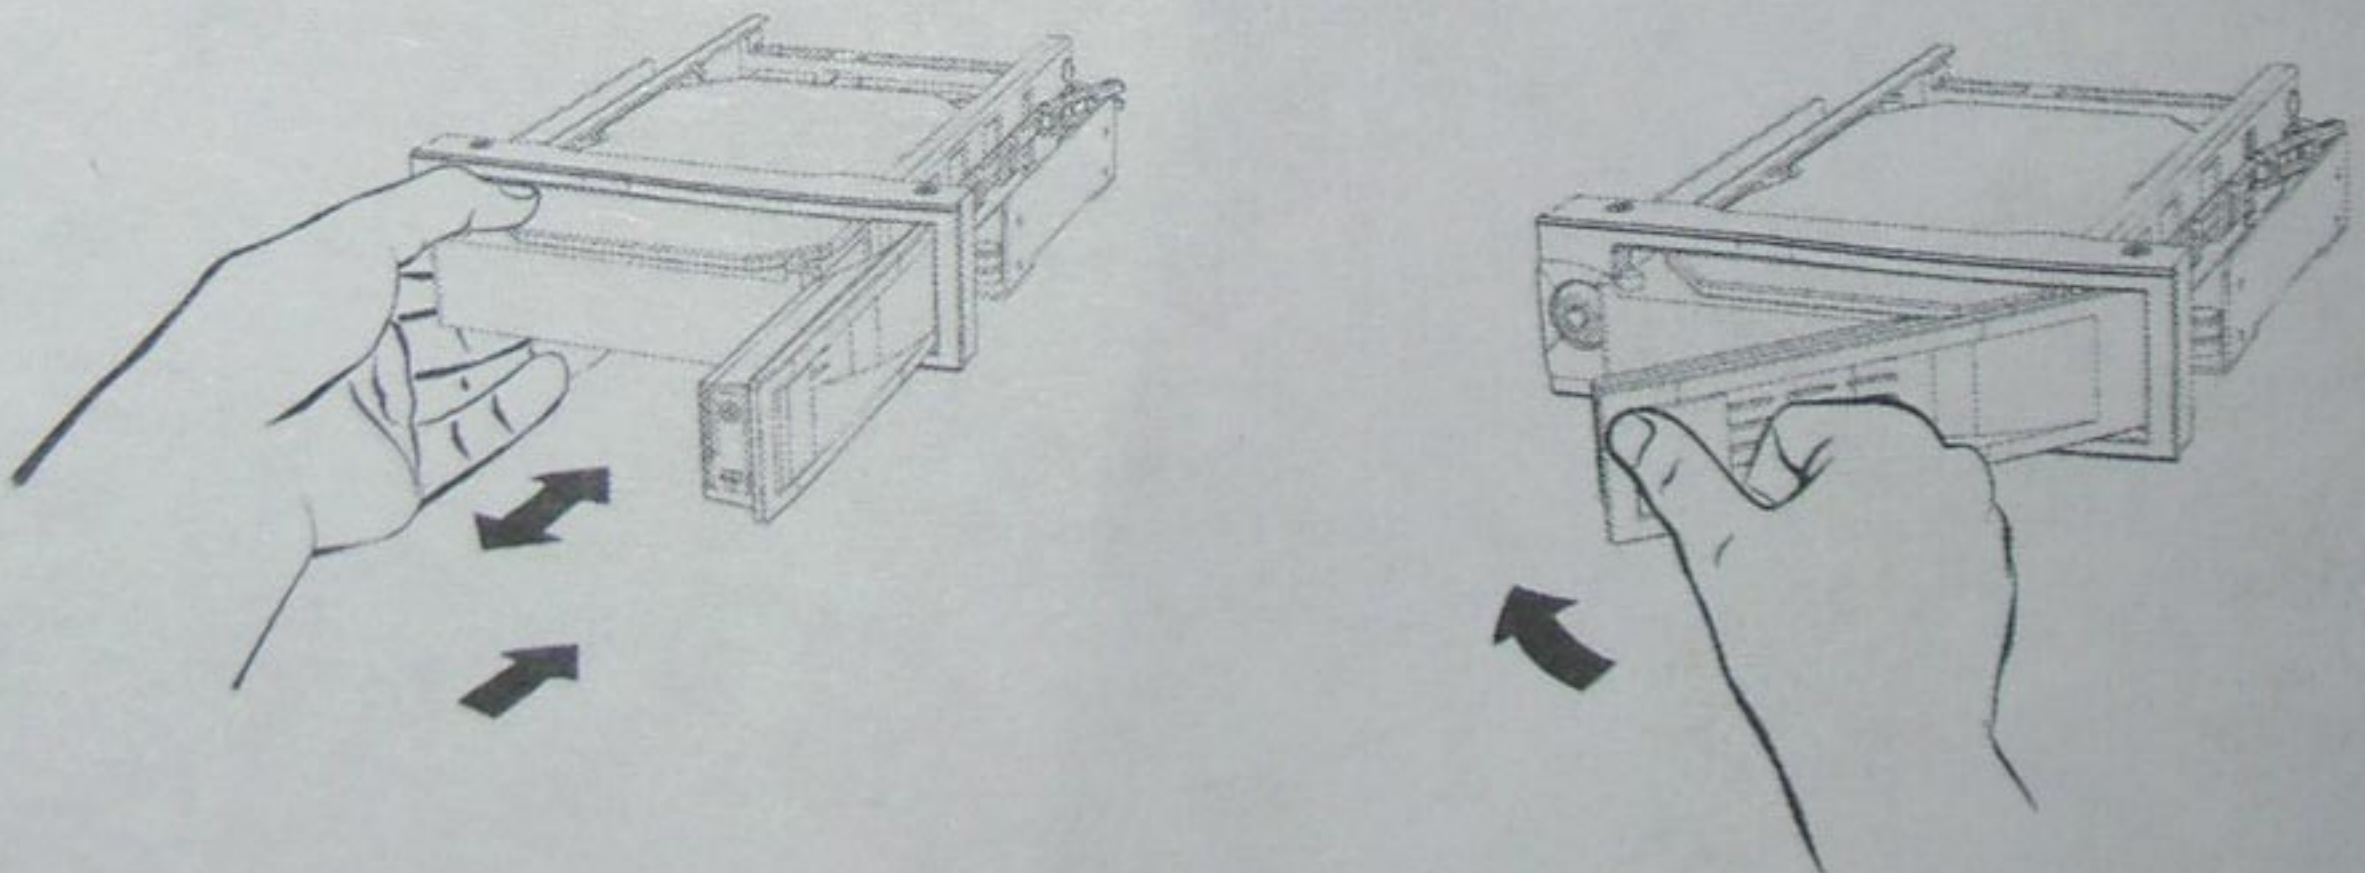



The front panel door will not be closed firmly if hard disk is being inserted in wrong direction EZ-Rack will get damaged if closed by force.

3. Press the door to push hard drive into EZ-Rack until door lock

Ejecting a hard drive from the EZ-Rack

1. Smoothly pull the spring lock to open the door The Key lock should be on the Removable position Otherwise, the locks would be damaged.

2. Carefully take the hard drive out from EZ-Rack.



Hard disk may be reach over 50°C when ejected from EZ-Rack. It will not burn the fingers, but please handle with carefully.



1. Hard disk is a precised and accurated device, need to care specially. Please read the manual of hard disk for precaution.

2. Do not eject the hard disk while it is busy.

3. Please hold the hard disk by edge, not to touch the PCB on it

4. We will only provide repair service to our product malfunction problems, not be responsible for any software, hardware or data stored within that resulted in damaged to the product